

Handling information


CALOSTAT® Pad

CALOSTAT® Pad is easy to use. Please observe the following:



DELIVERY

CALOSTAT® Pad is delivered on pallets in protective cardboard packaging. Please observe the information provided in the safety data sheet, which you can download at www.calostat.com and selecting Product Information from the menu.

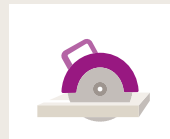

MECHANICAL CUTTING

CALOSTAT® Pad can be cut quickly and easily to the desired dimensions using knives for insulating materials. We recommend using blades with small serration to prevent dust formation.



CARRY UPRIGHT

CALOSTAT® Pad should be handled with care. The boards are best carried upright.



DRILLING

You can drill holes into the boards using any commercially available drill. A high drill speed will achieve better results. Make sure you have an appropriate underlayment.



CORNERS AND EDGES

To prevent damage, do not apply excessive pressure to corners and edges while handling. Boards should only be placed on their edges with care and for short periods of time; it is best to store them flat.



SAFETY GEAR

CALOSTAT® Pad is non-toxic and poses no risk to humans or the environment. Nevertheless, we advise you to use personal protective equipment as recommended in the safety data sheet.



MANUAL CUTTING

CALOSTAT® Pad can be cut with ordinary box cutters. When cutting, make sure the board is on a non-slip, cut-resistant underlayment. Use a suitable guide in order to make a straight cut.



TAPING

Cut edges can easily be taped using a suitable adhesive tape. We recommend, for example, using "COMPEGO" tape made by "pro clima". Make sure the tape and the fabric overlap sufficiently (at least 20 mm per side). Taping instructions can be found on the back of this information sheet.

Cutting and Taping of CALOSTAT® Pad



1 Use a box cutter alongside a ruler with firm pressure. Make sure to also cut the lower fabric.



2 Remove dust if necessary.



3 To close off edges we recommend, for example, the adhesive tape "COMPEGO" from the company "pro clima".



4 Remove the paper from the tape.



5 Make sure there is sufficient overlap of adhesive tape and fabric (min. 20 mm per side).



6 Wrap the tape around the edge and press it down from center outwards.



7 Stick both ends together and cut off excess adhesive tape.



8 There are different tape widths (60 mm and 100 mm) for different Pad thicknesses.

This information and any recommendations, technical or otherwise, are presented in good faith and believed to be correct as of the date prepared. Recipients of this information and recommendations must make their own determination as to its suitability for their purposes. In no event shall Evonik assume liability for damages or losses of any kind or nature that result from the use of or reliance upon this information and recommendations. EVONIK EXPRESSLY DISCLAIMS ANY REPRESENTATIONS AND WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, AS TO THE ACCURACY, COMPLETENESS, NON-INFRINGEMENT, MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE (EVEN IF EVONIK IS AWARE OF SUCH PURPOSE) WITH RESPECT TO ANY INFORMATION AND RECOMMENDATIONS PROVIDED. Reference to any trade names used by other companies is neither a recommendation nor an endorsement of the corresponding product, and does not imply that similar products could not be used. Evonik reserves the right to make any changes to the information and/or recommendations at any time, without prior or subsequent notice. CALOSTAT® is a registered trademark of Evonik Industries AG or one of its subsidiaries.

EVONIK RESOURCE EFFICIENCY GMBH

Thermal Insulation
 Rodenbacher Chaussee 4
 Building 885
 63457 Hanau-Wolfgang
 Germany
 Phone +49 6181 59-5200
 Fax +49 6181 59-75200
 calostat@evonik.com
 www.calostat.com