

Handling information


CALOSTAT®

CALOSTAT® panels are easy to handle. Please observe the following instructions:




DELIVERY

CALOSTAT® is supplied on pallets protected by cardboard packaging. Please download the safety data sheet under the menu item Product Information at www.calostat.com and read it carefully. Take care to lift off the cardboard upward when you remove the packaging, so that the panels are not damaged.

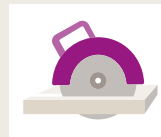


MACHINE CUTTING

CALOSTAT® panels are quickly and easily cut to the required dimensions with circular knives or circular or band saws. We recommend that the toothing or serration be as fine as possible, to prevent dust formation.

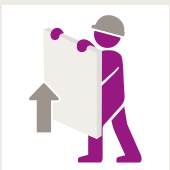


CARRY THE PANELS VERTICALLY

The panels should always be carried vertically. To lift the panels, first shift them a few centimeters away from the stack and then stand them upright. In this way you can hold the panels by the upper edge and transport them easily and safely. To store them, proceed in the reverse order.

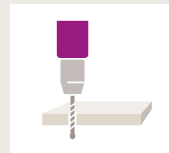


DRILLING

Any simple commercially available drill, including cordless drills, can be used to drill holes in CALOSTAT® panels. Be sure to use a suitable base.

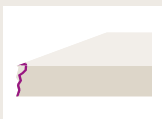

CORNERS AND EDGES

The corners and edges of the panels are susceptible to damage on impact. Panels should therefore always be transported with care and stored horizontally.

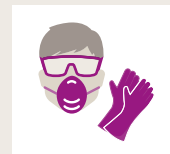

EQUIPMENT

CALOSTAT® is non-toxic and is safe for people and the environment. We nevertheless advise you to use personal protective equipment, as recommended in the safety data sheet.



MANUAL CUTTING

CALOSTAT® can be cut using normal cutters. Make sure to work on an anti-slip and cut-resistant base. Use an appropriate guide to ensure a straight cut.



VIDEO

On our home page you will find a short video tutorial on handling CALOSTAT®.